Typical Installation

Series Progressive Divider Valve Installations

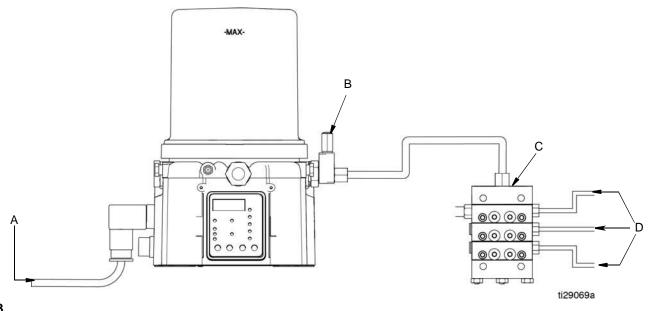


Fig. 3

- A Connected to fused power source
- B Pressure relief valve (Not included/required for each outlet
 - user supplied. See Parts, page 40)
- C Series progressive divider valves (Divider Installations)
- D To lube points

8 332298E